

Assembly instructions

Drain valve art. 711



Insert the item into the radiator connector and turn it until the O-ring adheres to the outer surface of the connector. Ensure that the O-ring adheres to the flat surface of the connector and is not ejected from the seat. Although the cap can withstand a tightening torque of 35 Nm, do not exceed the recommended maximum tightening torque of 10 Nm to prevent the O-ring from being ejected from the seat, from being cut or permanently deformed. The connected component must comply with the DIN 76-2 standard.

The installer is responsible for checking correct installation of the component, bringing the system at least to operating pressure and ensuring that no leaks occur. Freezing of the fluid inside the system must always be avoided to avoid breakage of the component, which is not designed to withstand the overpressure caused by the change of state.