
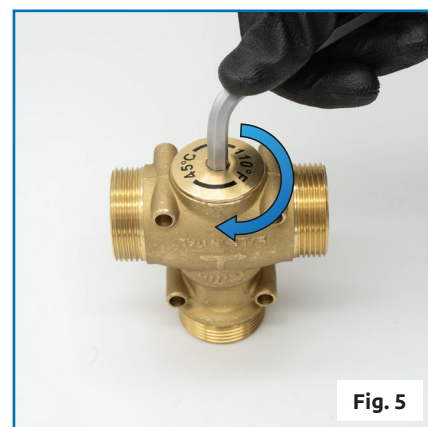
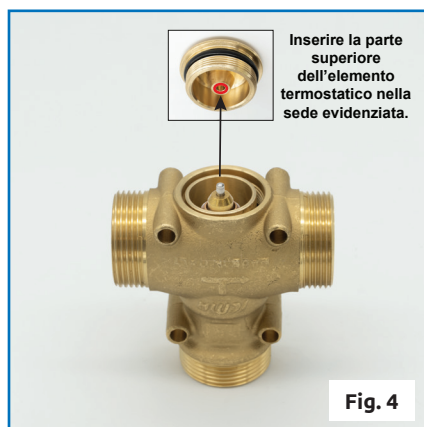
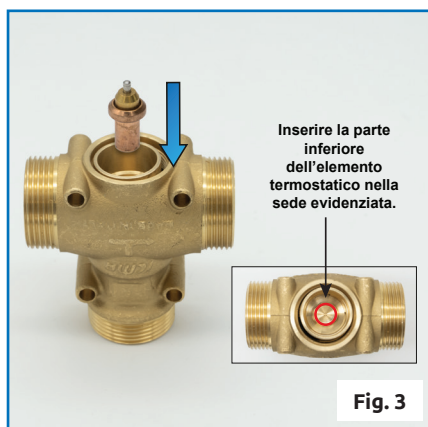
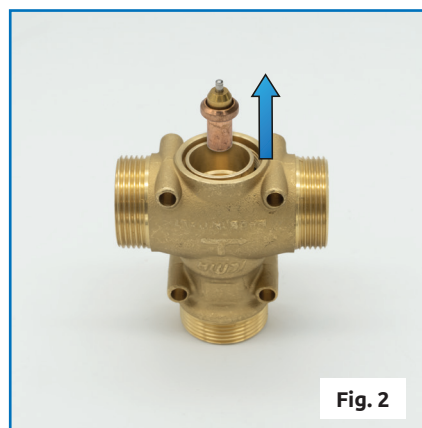


Replacement instructions of the thermostatic element for anti-condensation valves

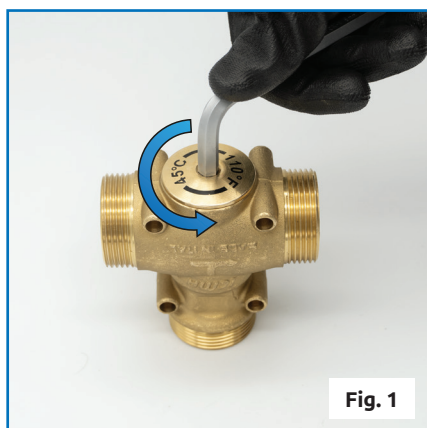

⚠ Important: always wear protective gloves during all operations.

1. Unscrew the cap (fig. 1)

Unscrew the valve cap. Use an 8mm Allen wrench for the 1 1/4" size and a 10mm Allen wrench for the 1 1/2" size.

2. Remove the thermostatic element (fig. 2)

Carefully remove the thermostatic element to be replaced.

3. Insert the new thermostatic element (fig. 3 and 4)

Position the replacement element, making sure that the lower part and the upper part are correctly inserted in their respective seats.

4. Screw the cap back on (fig. 5)

Replace the cap and tighten it again. Use an 8mm Allen wrench for the 1 1/4" size and a 10mm Allen wrench for the 1 1/2" size.