
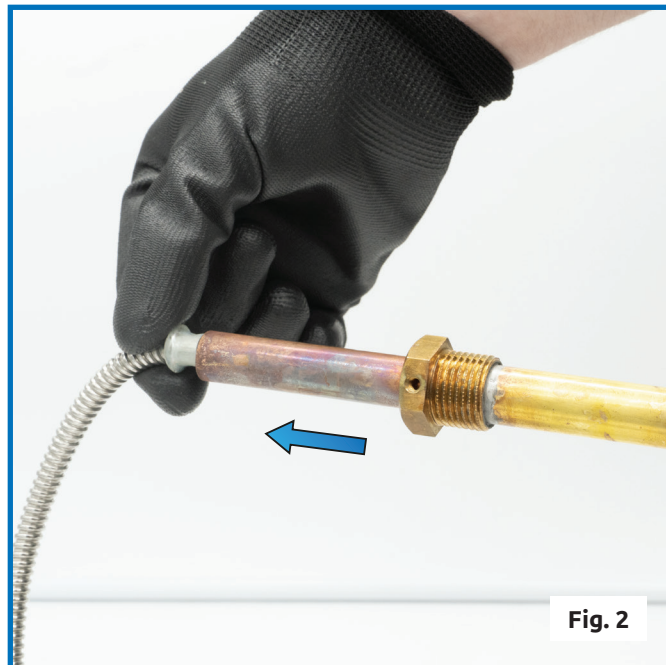


Replacement instructions of the well of the thermal drain valve item 605

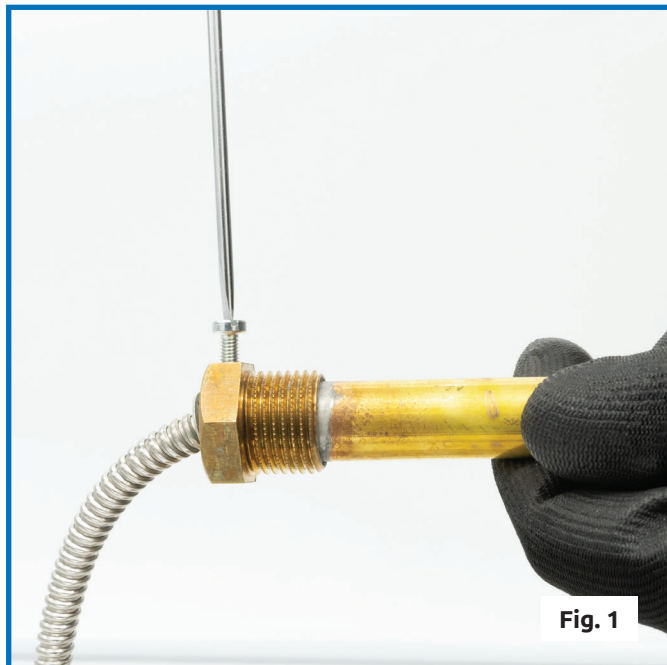

⚠ Important: always wear protective gloves during all operations.

1. Use a cross-head screwdriver to loosen the screw, as shown in fig. 1
2. Remove the well to be replaced as shown in fig.2.
3. Insert the replacement well into its seat.
4. Reapply the screw until tight, making sure the well is securely fastened.