

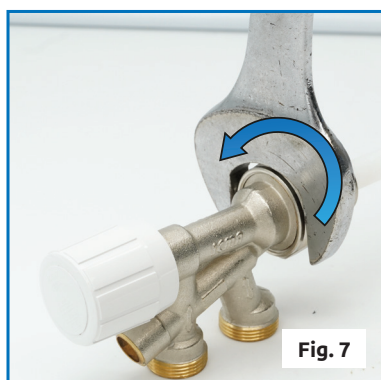
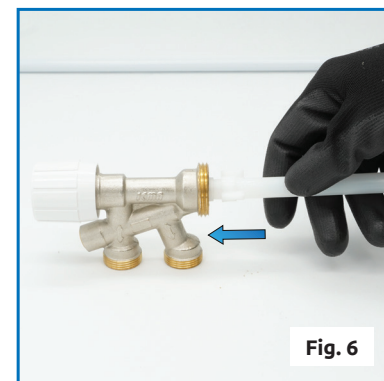
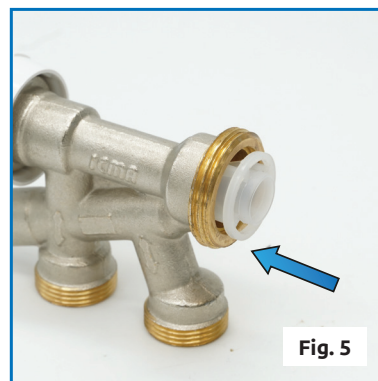
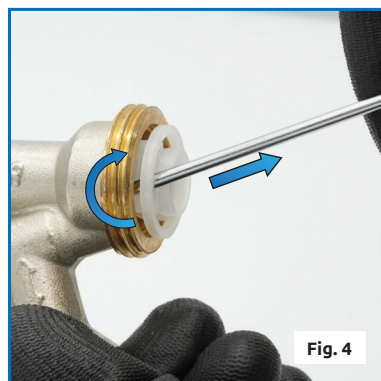
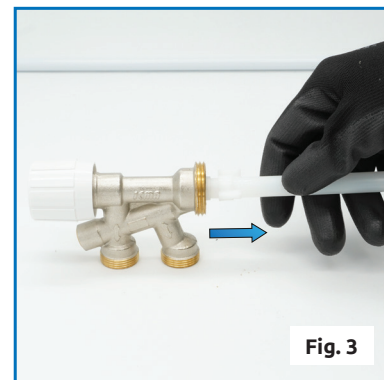


Item RA1886AD20 - RA1894AD20 - RA1886AF20 -
RA1856AD20 - R40886AD31 - R21891AD32

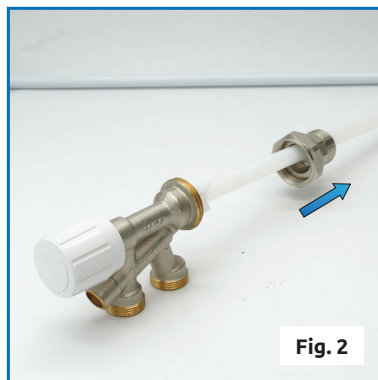

Replacement instructions of probe + probe holder and valve sleeve item 891

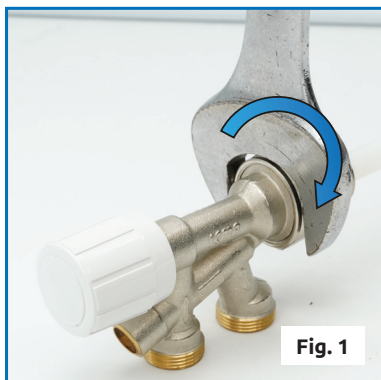

⚠ Important: always wear protective gloves during all operations.

1. Using a 37 mm wrench, remove the cap as shown in fig. 1.
2. Remove the cap and the nozzle, following the instructions in fig. 2.
3. Remove the probe to be replaced, as shown in fig. 3.
4. Remove the sleeve to be replaced using a slotted screwdriver, levering slightly while rotating to facilitate its extraction as shown in fig. 4.
5. Reassemble the replacement sleeve as shown in fig. 5
6. Reassemble the replacement probe as shown in fig. 6
7. Screw the cap back on as shown in fig. 7

Item RA1886AD20 - RA1894AD20 - RA1886AF20 -
RA1856AD20 - R40886AD31 - R21891AD32



Replacement instructions valve shutter guide item 886

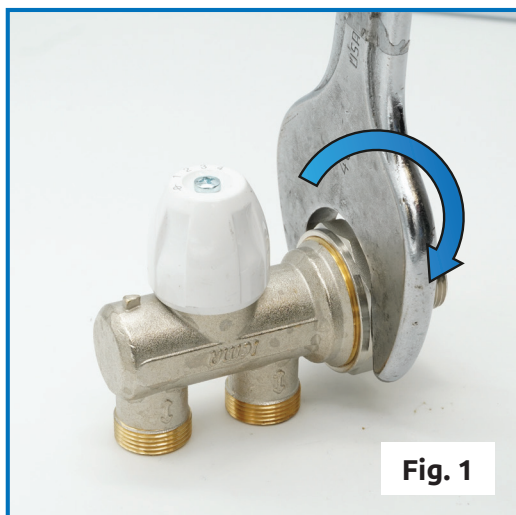


Fig. 1

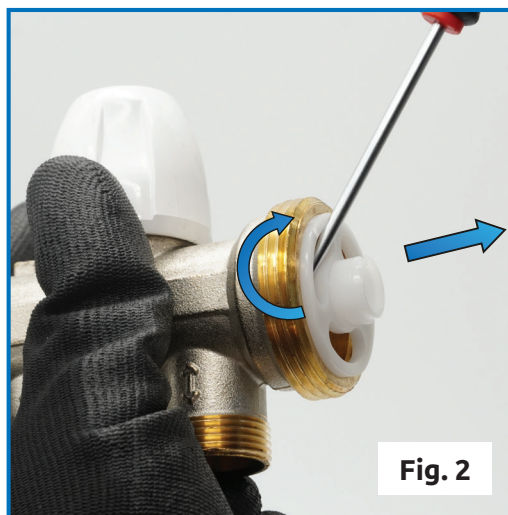


Fig. 2

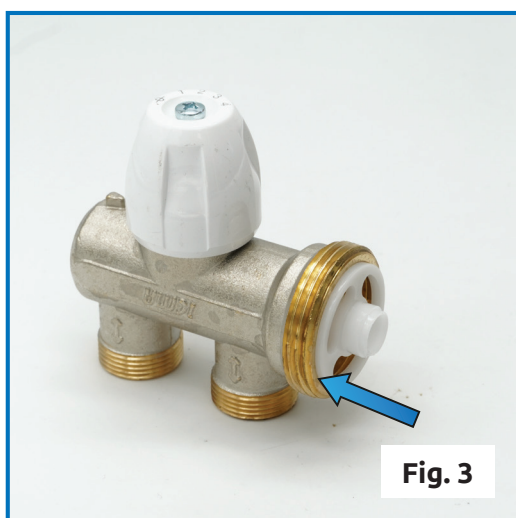


Fig. 3

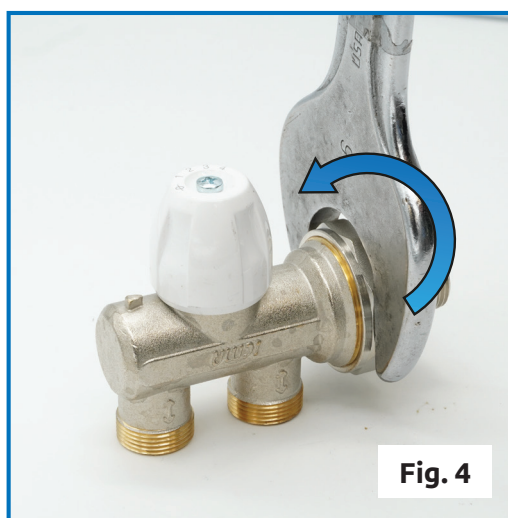


Fig. 4

⚠ Important: always wear protective gloves during all operations.

1. Using a 46 mm wrench, remove the cap as shown in fig. 1.
2. Remove the sleeve to be replaced using a slotted screwdriver, levering slightly while rotating to facilitate its extraction as shown in fig. 2.
3. Reassemble the replacement sleeve as shown in fig. 3
4. Screw the cap back on as shown in fig.4