
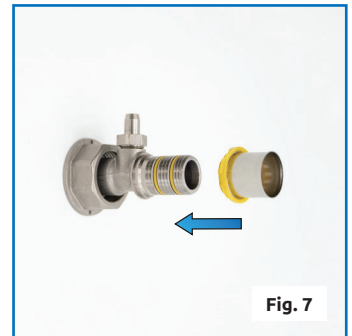
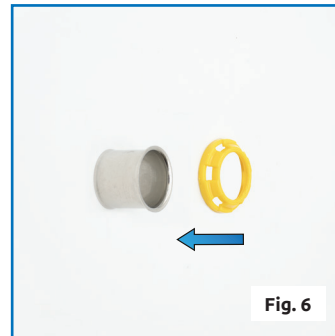
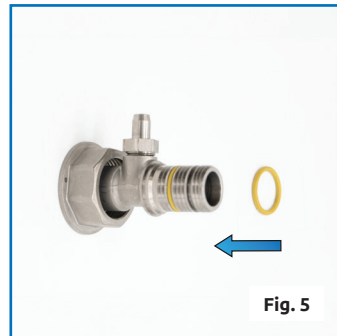
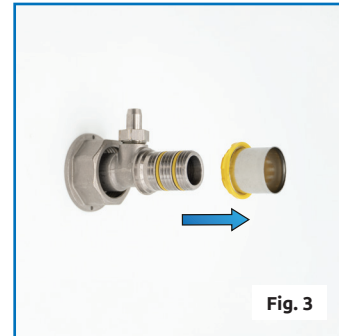


Replacement instructions of ring, bushing and o-ring of Sempigas press-on fittings

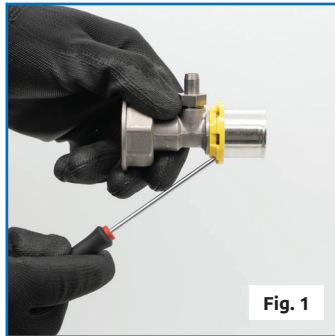

⚠ Important: always wear protective gloves during all operations.

- 1. Using a screwdriver**, remove the ring with the bushing to be replaced, levering both the lower and upper parts (Fig. 1, 2 and 3)
- 2. Remove the worn O-rings** using a screwdriver (Fig. 4).
- 3. Insert the replacement O-rings**, making sure that they are well housed in their respective seats and that they have adequate lubrication (Fig. 5).
- 4. Fit the ring on the bushing** (Fig. 6).
- 5. Insert the ring and the bushing** into the body of the fitting, checking the correct positioning (Fig. 7).

N.B.: if the ring is replaced, it is also advisable to replace the bushing and vice-versa.