
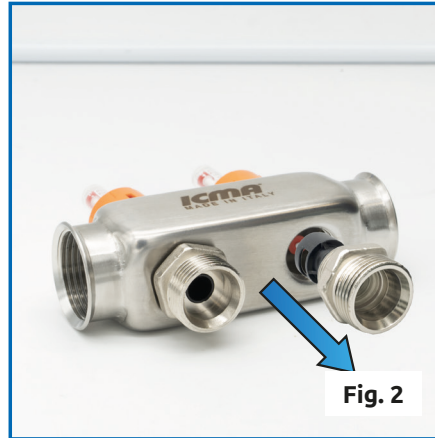


Instructions for replacing the socket for manifold inserts and flow meters

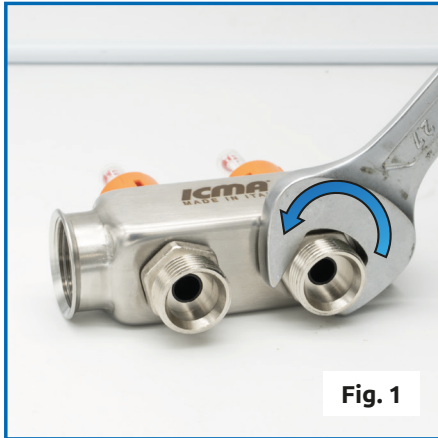

The manifold must be shut off if the operation is carried out whilst the manifold is connected to a system

⚠ Important: always wear protective gloves during all operations.

1. Using a **27 mm** spanner, remove the socket as shown in **Fig. 1**, in order to replace it.