

FUNCTION

The burn-proof thermostatic mixers, series 142-143-144-145, are utilized in domestic hot water heating systems and function in continuous operation.

Their purpose is to maintain a constant temperature in the mixed water conveyed to users regardless of any variations in the pressure or temperature values of the hot and cold water at the mixer inlet, or in the flow meter.

They are also equipped with a burn-proof safety system: this allows the flow of hot water to be shut off automatically as soon as cold water is missing at the mixer inlet.

Article 144 is also equipped with two non-return valves placed at the hot and cold water inlets; their function is to prevent any undesired fluid returns to the system.



Art. 142



Art. 143

Art. 145

Art. 144 (with non-return valves)

PRODUCTS


Article	Size	Connections	Article	Size	Connections
90142AD05	G 1/2" M	With pipe union	90144AE05	G 3/4" M	Pipe union + Non-return valve
90142AE05	G 3/4" M	With pipe union			
90143AD05	G 1/2" F	Female	90145AE05	G 3/4" M	Male
90143AE05	G 3/4" F	Female	90145AF05	G 1" M	Male

OPERATING PRINCIPLE

Mixer operation is based on the temperature sensor contained inside the mixer, in the mixed water outflow area.

Variations in the expansion of the thermostatic component cause the plunger contained inside the mixer body to slide. This generates correct mixing of the cold and hot water at the water distribution system inlet.

In this way, the mixer automatically maintains the temperature value set, even when there are variations in pressure caused by the drawing of hot and cold water by the various users, or when there are variations in the temperature of either the cold or hot water at the inlet.

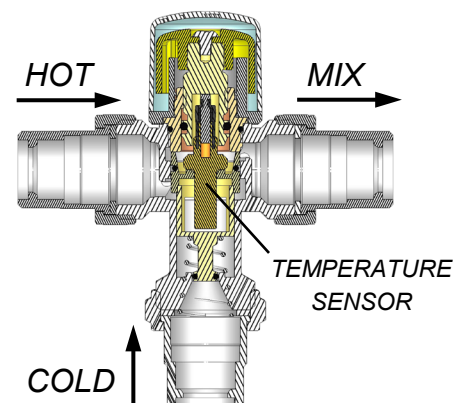


BURN-PROOF DEVICE

In domestic hot water heating systems with accumulator, water must be kept at a minimum temperature of 60°C in order to totally prevent the growth of the bacteria that causes a very dangerous infection called Legionnaire's disease.

Water cannot be used directly at this temperature because it can cause burns. The installation of a thermostatic mixer is recommended to ensure that water is safe to use. The mixer keeps the preset value constant when there are variations in temperature and pressure at the inlet.

The graph at the side of text indicates the degree of burning that can be caused depending on water temperature and heat exposure time. The mixer solves this problem by interrupting the flow of hot water when the flow of cold water is missing at the inlet.

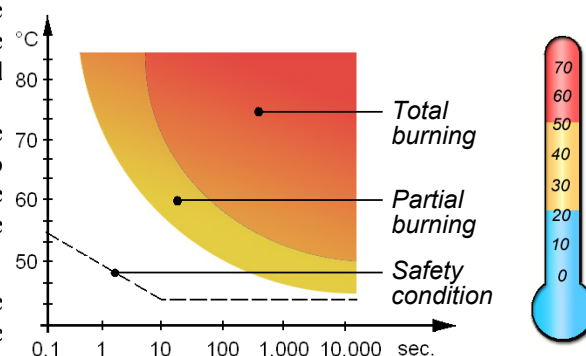

ART. 142-143-144-145 THERMOSTATIC MIXER
SIDE MIXED WAY

TECHNICAL DATA SHEET 07/2017 - ENG

TECHNICAL CHARACTERISTICS


Body: CW617 N Brass - UNI EN 12165
Large screw: CW614 N Brass - UNI EN 12164
Springs: STAINLESS Steel
Lock nut: POM
Hand wheel: POM
Cap: Transparent ABS
O-Ring: PEROXY EPDM (high resistance)

NON-RETURN VALVE

Body: CW614N Brass - UNI EN12164
O-Ring: PEROXY EPDM (high resistance)
Spring: STAINLESS Steel

Fluid used: Water
Max percentage of glycol: 50%
Temperature range: 30 to 60°C
Factory calibration: 38 ±2°C
Max operating pressure (static): 10 bar
Max operating pressure (velocity): 5 bar
Max temperature at inlet: 85°C
Max ratio between C/F or F/C pressures: 2:1

HYDRAULIC CHARACTERISTICS

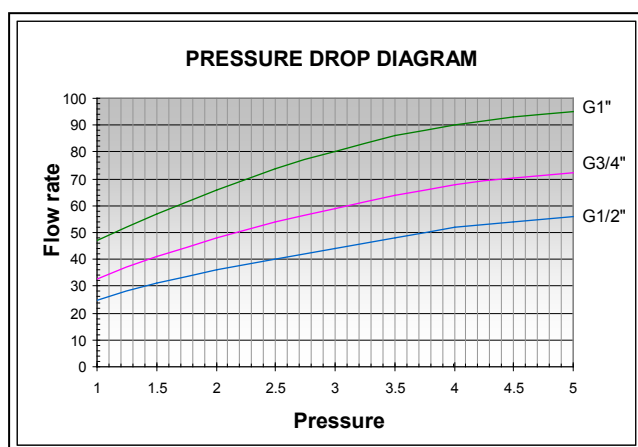

Art. 142-143

Kv [m³/h]	
G 1/2"	1.5
G 3/4"	2


Art. 144

Kv [m³/h]	
G 3/4"	2


Art. 145

Kv [m³/h]	
G 1"	2

DIMENSIONS

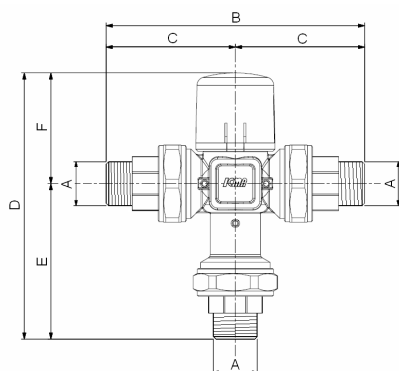

Code	A	B	C	D	E	F
90142AD05	1/2" M	124	62	133	80	53
90142AE05	3/4" M	124	62	133	80	53
90144AE05	3/4" M	124	62	133	80	53

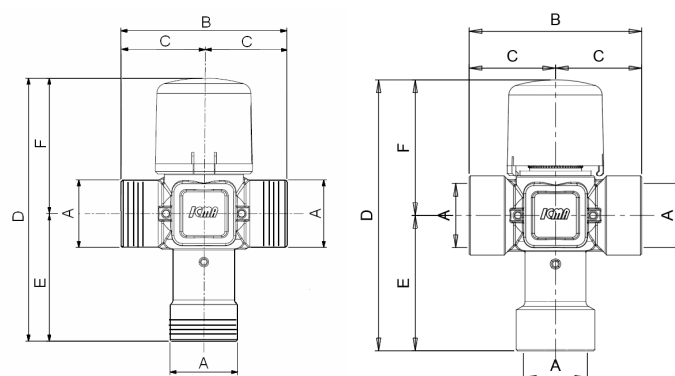

Code	A	B	C	D	E	F
90143AD05	1/2" F	65	32.5	103	50	53
90143AE05	3/4" F	68	34	106	53	53
90145AE05	3/4" M	65	32.5	103	50	53
90145AF05	1" M	60	30	100	47	53


INSTALLATION

Make sure that pipes are free of impurities before activating the mixer to avoid equipment malfunction.

Filters should be installed at the inlet of the water distribution system.



The following indications are provided on the mixer body:

- hot water inlet indicated in red
- cold water inlet indicated in blue
- mixed water outflow

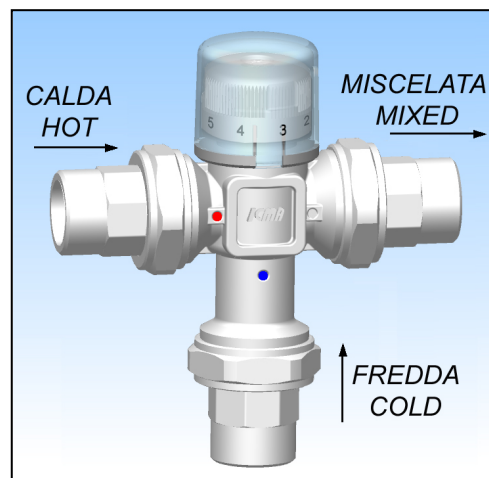

TEMPERATURE ADJUSTMENT

The temperature is set by turning the knob with graduated scale located on the mixer.

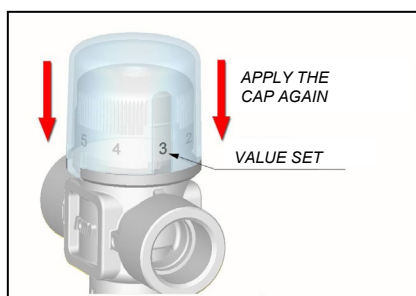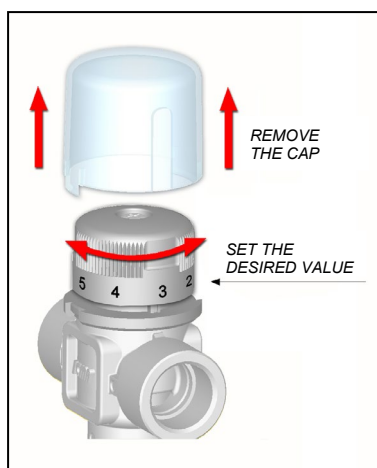

Reference conditions:

Hot T: 68°C

Cold T: 13°C



Inlet pressure: 3+3 balanced Bar

ADJUSTMENT RANGE



Setting	1	2	3	4	5	6
°C	30	35	40	45	50	60

NON-RETURN VALVES

Non-return valves should be installed on systems equipped with mixers in order to avoid undesired fluid returns. Item 144 is fitted on a non-return valve, one at the hot water inlet and another at the cold water inlet.

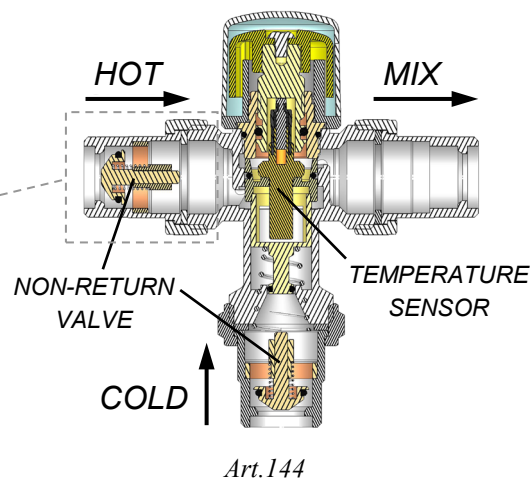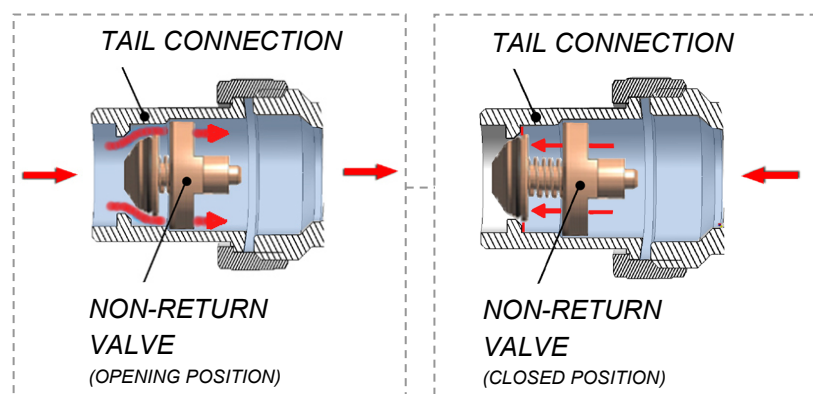

APPLICATION DIAGRAM

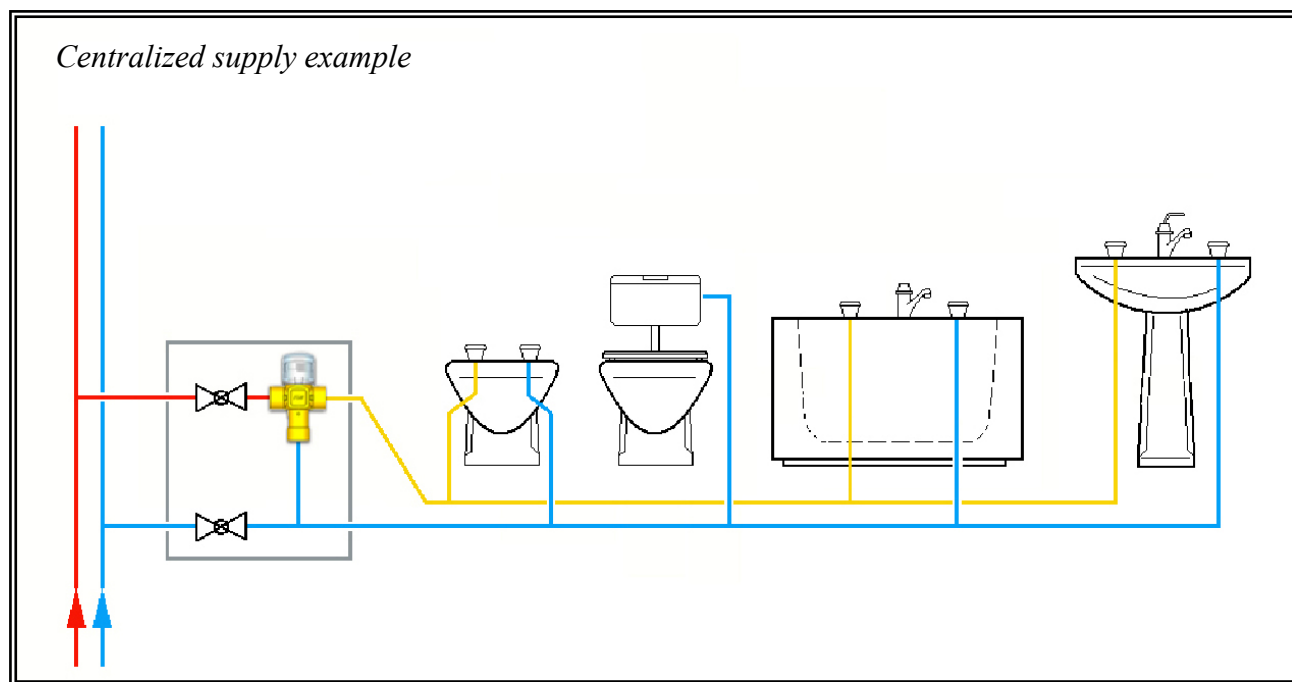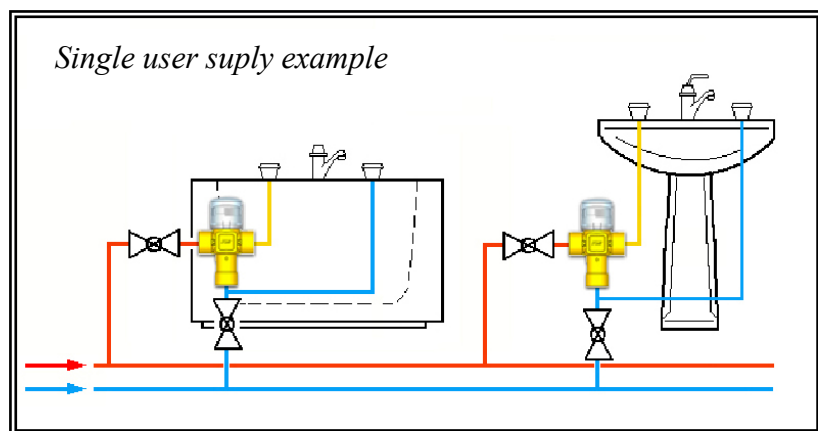

SAFETY

To keep in good condition the internal parts during cleaning, do not use any detergents containing solvents. Read the assembly and start-up instructions and comply with them scrupulously before starting the system to prevent accidents and damage to the system caused by improper use. Remember that the guarantee will be forfeited in the event of any unauthorised changes or tampering with the device during assembly and construction. Comply with all safety warnings, and if you have any doubts about use or changes to parameters or functions, request the assistance of qualified service personnel.