


Instructions for replacing TACONOVA flow meters for underfloor heating manifolds

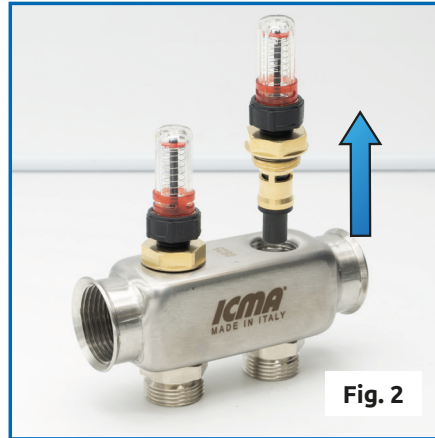

The manifold must be shut off if the operation is carried out whilst the manifold is connected to a system

⚠ Important: Always wear protective gloves during all operations.

1. Using a **24 mm spanner**, remove the flow meters as shown in **Fig. 1**, in order to replace them.