
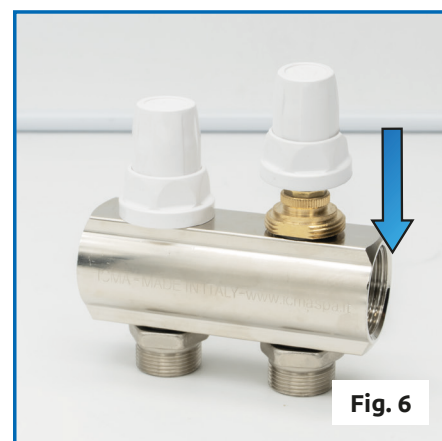
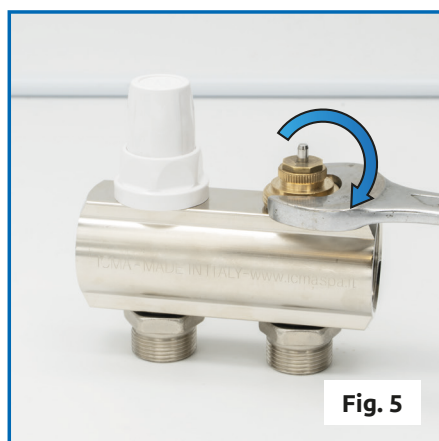
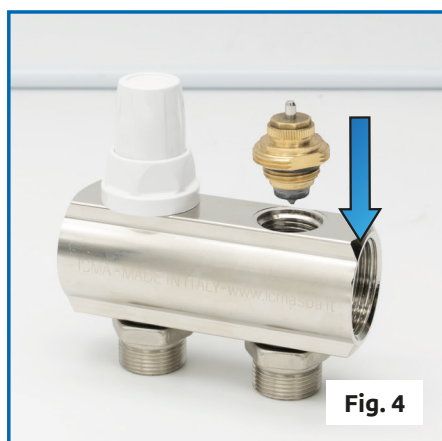
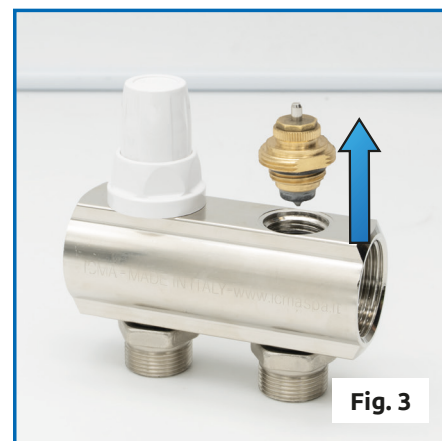
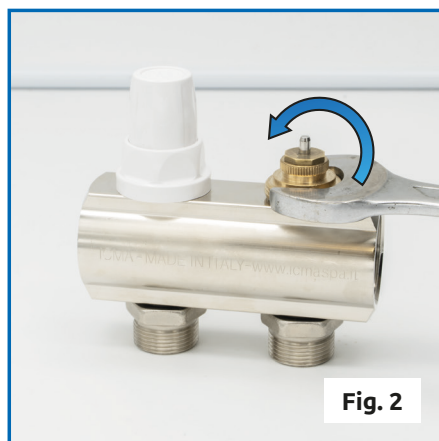


Instructions for replacing thermostatic inserts for manifolds in underfloor heating systems

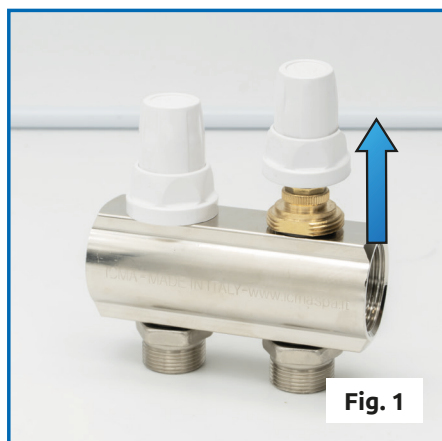

The manifold must be shut off if the operation is carried out whilst the manifold is connected to a system

⚠ Important: always wear protective gloves during all operations.

1. Using a **24 mm AD spanner** **EXCEPT FOR CODE: RG0295AD01 – use a 25 mm spanner**, remove the thermostatic inserts as shown in **Fig. 2**, first removing the handwheels as shown in **Fig. 1**.
2. After replacing the insert, as shown in **Figs. 3–4–5**, fit the handwheel as shown in **Fig. 6**.