
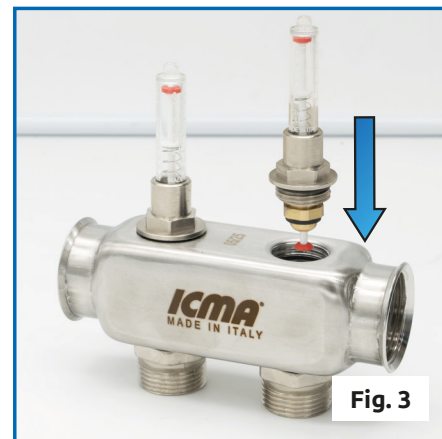
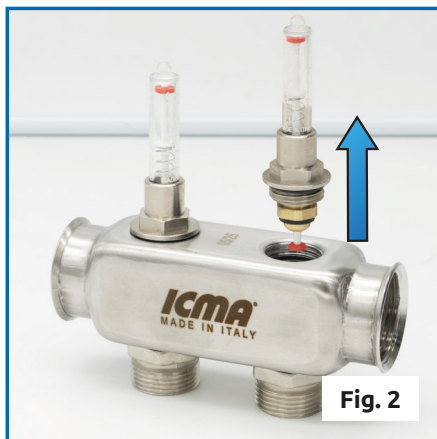


Instructions for replacing flow meters for underfloor heating manifolds

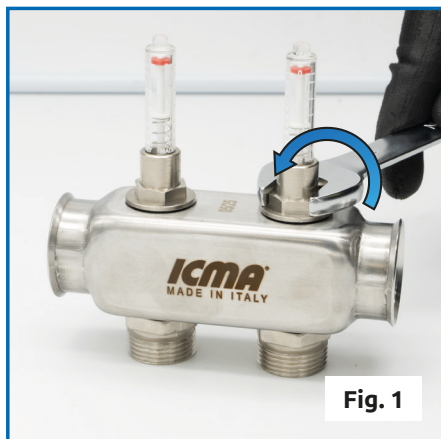

The manifold must be shut off if the work is carried out whilst the manifold is connected to a system

⚠ Important: always wear protective gloves during all operations.

1. Using an **18 mm** spanner, remove the flow meters as shown in **Fig. 1**, in order to replace them.