
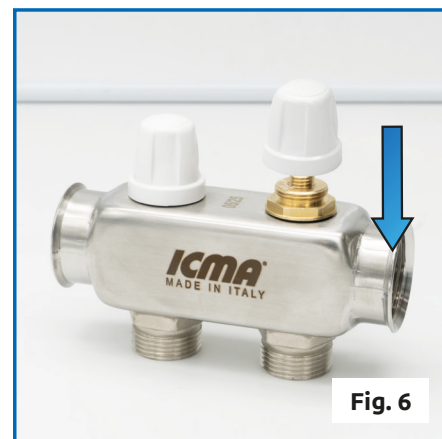
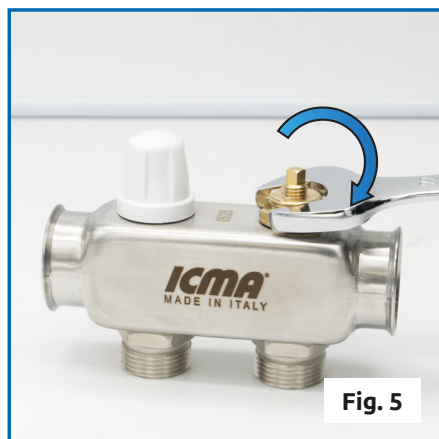
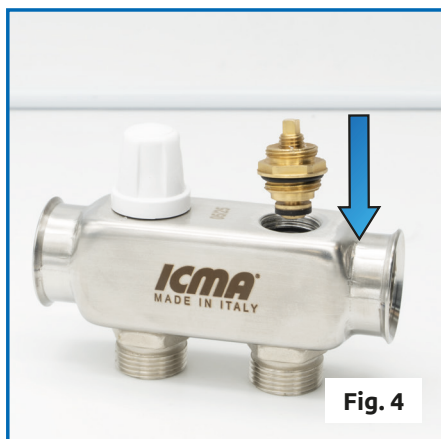
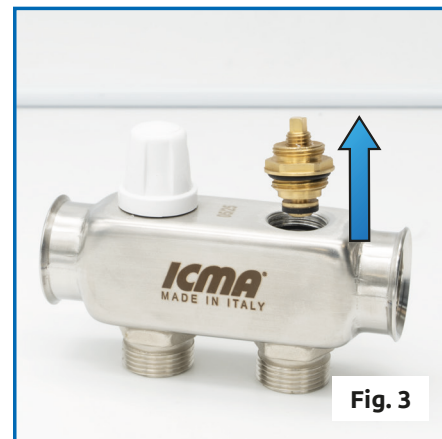


Instructions for replacing the manual adjustment inserts for underfloor retainers

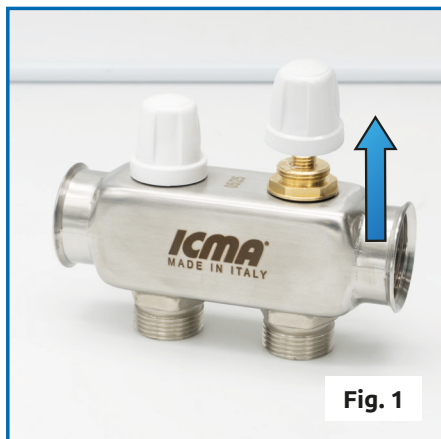

The manifold must be shut off if the operation is carried out whilst the manifold is connected to a system

⚠ Important: always wear protective gloves during all operations.

1. Using a **22 mm spanner for item RG0121AE01** and a **23 mm spanner for item RG2182PG01**, remove the manual inserts as shown in **Fig. 2**, first removing the handwheels as shown in **Fig. 1**;
2. After replacing the insert, as shown in **Figs. 3–4–5**, fit the handwheel as shown in **Fig. 6**.